




Replacement of the piston seal .

1°) Remove the belt:

- Remove the 4 screws of the belt cover and remove the clutch .

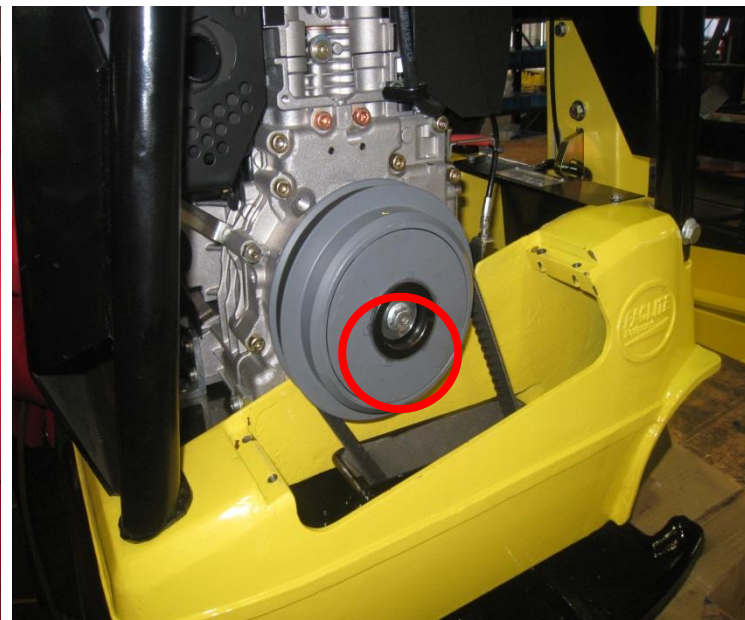

2°) Remove the frame of the base:

- Have a hoist or trolley with slings, up to 20 cm frame in order to remove the hydraulic connection.





3°) Remove the x4 screw and the piston cover:





4°) Replace the seal

