


## REGLAGE LEVIER DE VITESSE SUR DUMPER HTL 350

INSTÄLLNING GASREGLAGE FÖR HTL 350  
ADJUSTING THE GAS WIRE OF THE HTL DUMPER

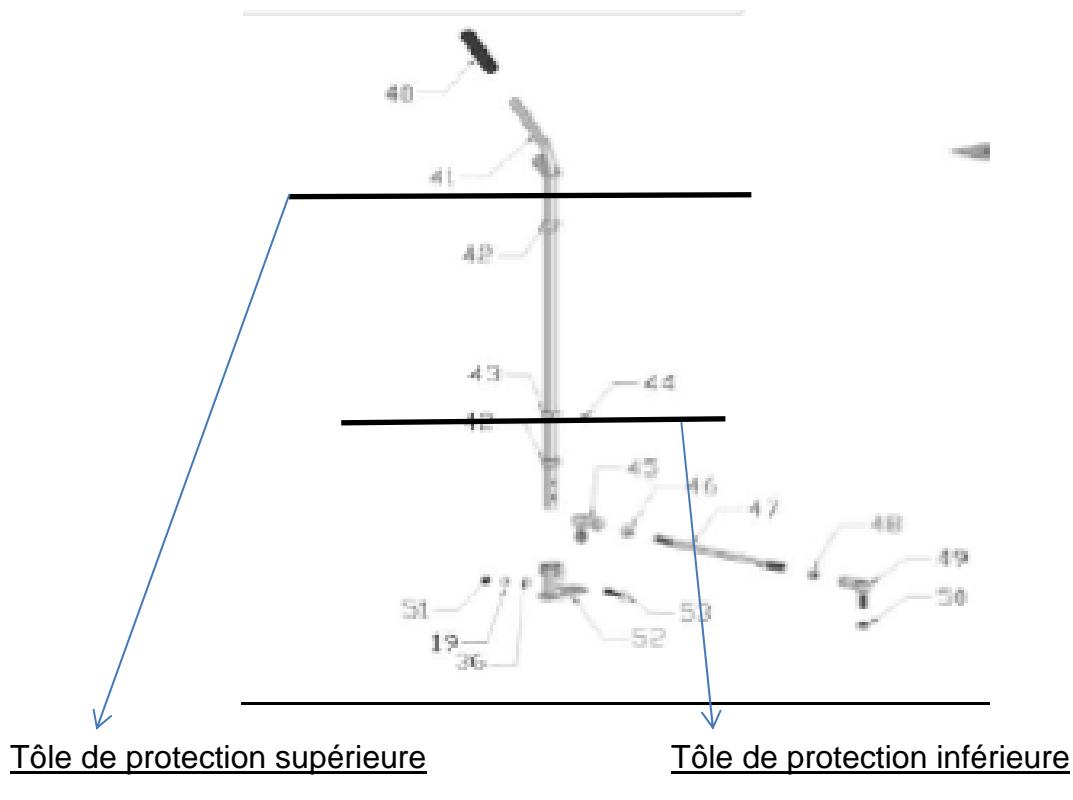

La bague N° 43 retenue par la vis N° 44 sert à régler la hauteur du levier de vitesse N° 41

Ajuster en hauteur le levier 41 pour qu'il ne frotte pas sur la tôle de protection et serrer la vis 44 de la bague 43 à l'embase de la tôle inférieure pour le maintenir dans cette position.


Muttern nr 43 som hålls fast av nr 44 skruven används för att justera höjden på växelspaken nr 41

Justera höjden på spaken 41 så att den inte skaver mot kåpan och dra åt skruven 44 och rmuttern 43 till på botten plåten för att hålla den i denna positionen

Merci de contrôler si la vis 44 est en place

Var god och kontrollera att skruven 44 är på plats

## REGULATION CONTROL LEVER ON DAMPER HTL 350

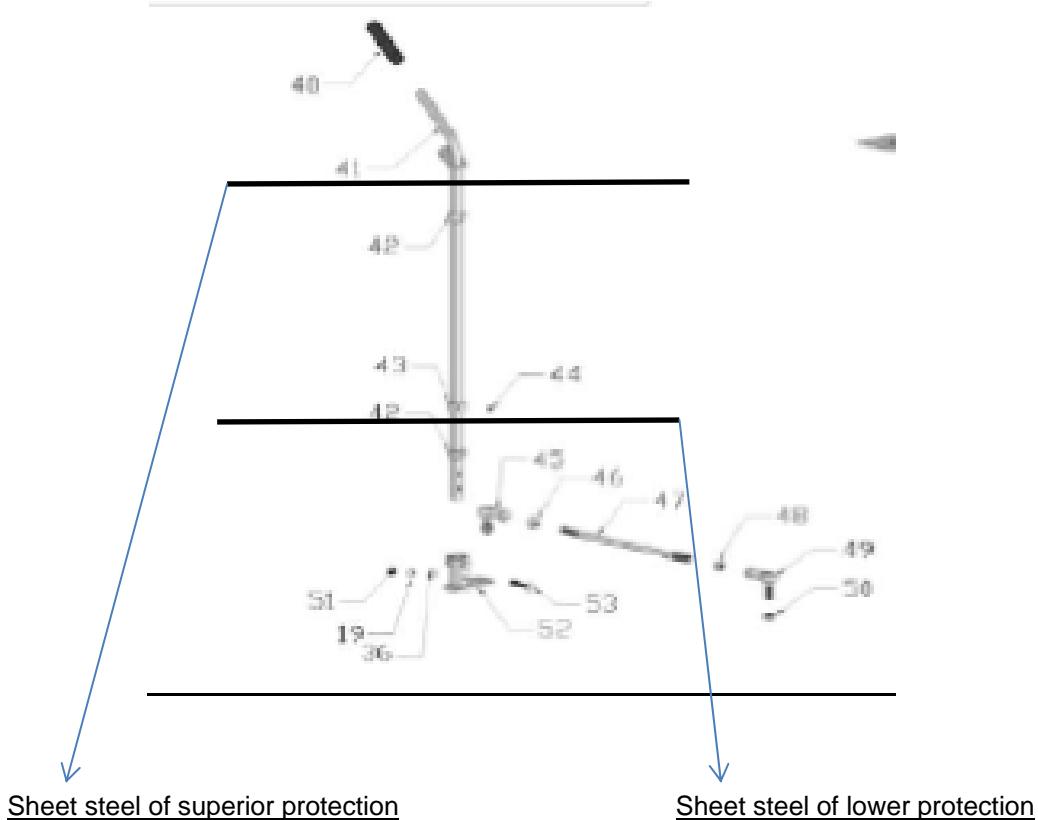

The ring N ° 43 retained by screw N ° 44 serves for adjusting the height of the control lever N ° 41

Adjust in height the control lever 41 so that it does not rub on the sheet steel of protection and to tighten screw 44 of the ring 43 in the lower on the base of the sheet steel to maintain it in this position

Please control if screw 44 is in place